

WALL MOUNTED FLEXIBUILD SORT UNIT ASSEMBLY INSTRUCTIONS

The Top Rail is supplied in 2400mm lengths, this can be cut to required length or fitted uncut for future use.

FIXING THE RAIL

Solid Walls— Drill through in rail with a 7mm masonry drill.

Fit suitable nylon wall plugs & secure rail to wall with No. 12 x 38mm raised head screws.

Hollow Walls— Use 'Fisher' nylon anchor type NA10 x 55, No. 50543 or similar.

END STOPS

These must be fitted before fitting cover strip.

Insert end stop's tongues between wall & back of rail, press in tightly.

Drill 3.7mm hole through rail & end stop about 7mm from end of rail.

Secure with self-tapping screw.

COVER STRIP


After the rail has been secured to wall, the cover strip is hung along the top of the rail & tapped into place using a piece of wood & a hammer.

To remove cover strip— start at one end, insert a wide bladed screwdriver into the groove between the top of the cover & rail, twist the screwdriver to release the cover & work along rail unit until whole length is removed.


SORT UNIT

Assemble sort unit with brackets attached.

Lift complete unit & locate brackets onto the rail.

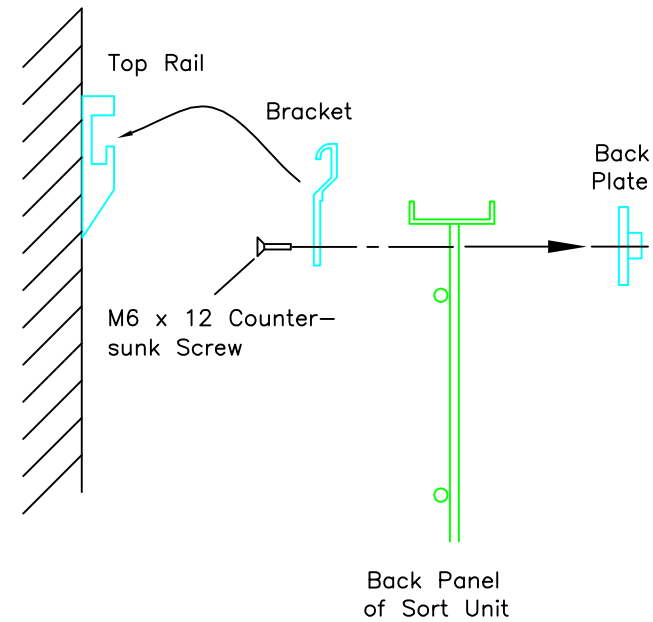

Fit 1 x bracket as shown to top centre of each rear panel of sort unit.

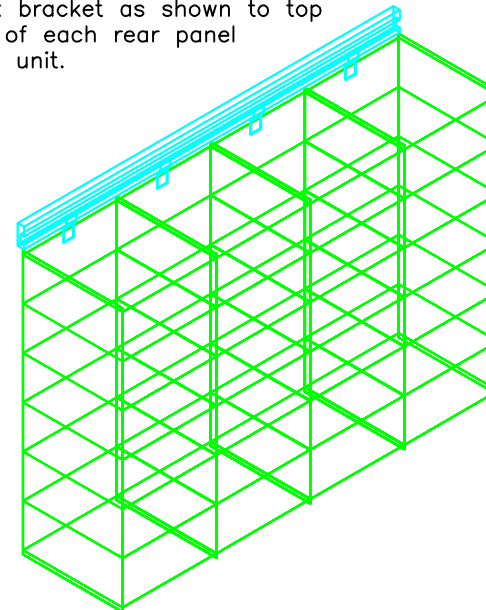

Ref: MRE 7281A20