

# Guide to Assembly & Usage

## Just/Stockrax Benches



### Information

If in doubt, contact the supplier.



Read this Guide thoroughly before commencing assembly and retain for future reference.



Before commencing assembly, unpack carefully and check that all components ordered are included.



Assembly should be undertaken by two competent people, preferably suitably trained shelving installers.



Tools - rubber or plastic faced mallet, broad blade screwdriver.



### Caution

During assembly, ensure to:



Take care during assembly and in use, particularly when lifting or stretching and when using tools.




Assemble and locate for use on a suitable level floor surface. Allow adequate working space.



Dispose of packaging materials responsibly.









Bench Type A

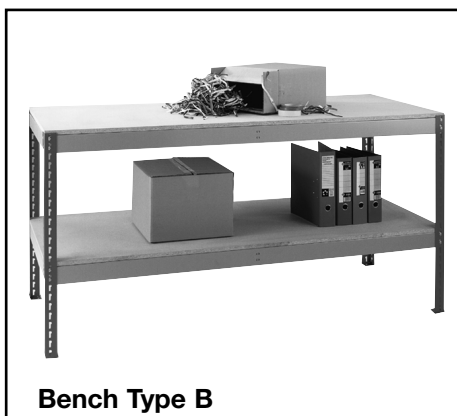

Bench Type B

### Bench Component Check List
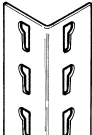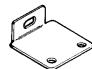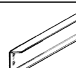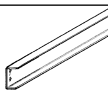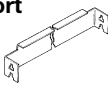
| Component  | Quantity |   |
|--|----------|---|
|  | A        | B |
| Heavy Uprights                    | 4        | 4 |
| Steel Foot Plate with nut & bolt  | 4        | 4 |
| Short Beams                       | 4        | 4 |
| Long Beams                        | 3        | 4 |
| Decking Support                   | 1        | 2 |
| Chipboard Work Top   | 1        | 1 |
| Chipboard (lower) Shelf         | -        | 1 |

## Bench Assembly

USE A RUBBER OR PLASTIC-FACED MALLET

1. Begin by assembling the left-hand end frame.

Connect top short beam to the front upright.

Locate the lugs at the end of the beam into the top of the 'P' slots in the upright.

Tap down, ensuring that lugs are fully located to the base of the 'P' slots.




**Note:** ensure beams are located the correct way up - they will fit one way only.

2. Connect to the rear upright.

3. Locate lower short beam.

4. Bolt a foot plate to the base of each upright.

5. Repeat to assemble right-hand end frame.

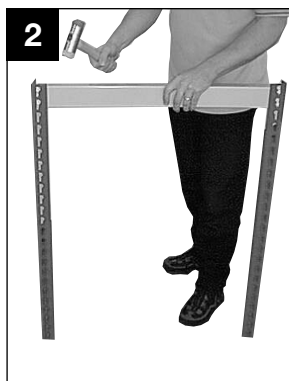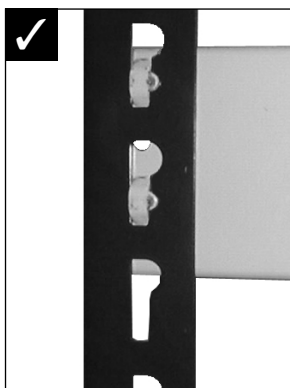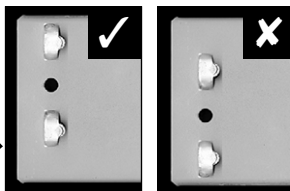

Continue overleaf

# Assembly continued

USE A RUBBER OR PLASTIC-FACED Mallet

6. Locate front & rear long beams, ensuring that the lugs are correctly located in the 'P' slots.

For both types of Workstation, fit a front and rear beam to support the work top.

For Type B, also fit front & rear beams to support the lower shelf.

For Type A, fit a single lower rear beam only.

7. Locate Decking Supports.


Slots in the decking supports locate into lugs at the centre of the beams.

8a. Type A Bench, beams and decking support in place.

8b. Type B Bench, beams and decking supports in place.

9. Locate chipboard work top (and lower shelf for Type B Bench) to complete bench assembly.

**Caution: take care to avoid finger traps when locating shelves.**

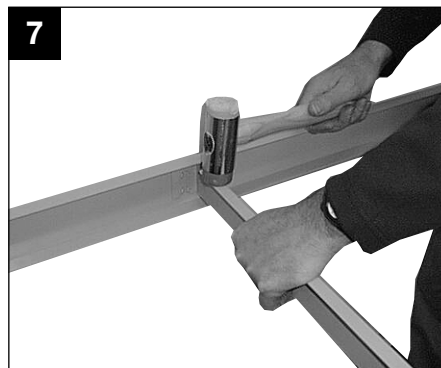

## Health & Safety

Rules for the safe use of benches:



**NEVER CLIMB ON THE STRUCTURE OR STAND ON SHELVES.**



**LOADING - Ensure that all loads are hand-loaded, safely & equally distributed across each shelf.**

The information contained in this leaflet was accepted as correct at the date of publication. However, the manufacturer reserves the right to make any necessary changes, in line with product development and improvement. Although all reasonable care has been taken to make it as complete and accurate as possible, no liability can be accepted for any inaccuracies or omissions.

Leaflet Reference: JS/B/AI.  
Revised issue, published January 2003.